Azurite D32T

User Guide

Always in **touch**

Telkom

Visit us at
www.phones4telkom.co.za
for more products

www.telkom.co.za

Menu structure

- PHONEBOOK
  - Option
    - VIEW
    - CALL
    - EDIT
    - SEARCH
    - RING TONE
    - SEND SMS
    - ADD NUMBER
    - NEW ENTRY
    - DELETE
    - TRANSMIT
- SMS
  - EDIT SMS
  - READ SMS
  - MEMORY
  - EMPTY BOX
  - SETTINGS
    - SMS CENTERS
- CALLS
  - INCOMING CALLS
  - OUTGOING CALLS
  - EVENTS
- ACCESSORIES
  - ALARM
  - TIMER
  - BIRTHDAY
  - ROOM MONITOR
- RING TONE
  - EXTERNAL CALL
  - INTERNAL CALL
  - BEEPS
  - SILENT MODE
- SETTINGS
  - PROGRAM KEYS
  - DATE/TIME
  - AUTO HANG UP
  - AUTO PICKUP
  - VOICE BOX No
  - LANGUAGE
  - SECURITY
    - KEYPAD LOCK
    - EMERGENCY
    - TIME LIMIT
    - RESTRICTION
    - CHANGE CODE
    - INTRUSION
  - ADVANCED SET.
    - SET HANDSET
      - REGISTRATION
      - BASE PRIORITY
      - RESET HANDSET
      - PERSON. REGISTR
    - SET BASE
      - REGISTR. MODE
      - RESET BASE
      - DELETE HANDSET
      - RENAME BASE
    - SET LINE
      - NETWORK TYPE
      - DIAL
      - FLASHING
      - PABX PREFIX
    - SET SMS
      - SMS CENTERS

Contents

Information 2
Safety information 2
Application information 2
Environment 2
Caller display 2
ICASA 3
Setting up/range 3

Service entry 4
Unpacking 4
Your base 4
Your handset 4
ECO mode 5
Connecting the base 5
Handset set-up 5
Handset turning on and off 5
Replacing the batteries 6

Getting started 7
Browsing through the menus 7

Telephoning 8
Making a call 8
Receiving a call 8
During a call 8
Handsfree 8
Call transfer 8
Second call 8
Ending a call 9
Communication between two handsets 9

Your phonebook 10
Viewing the phonebook 10
Creating an entry 10
Calling using the phonebook 10
Searching for a contact 10
Editing an entry 11
Deleting an entry 11
Sending a SMS from phonebook 11
Associating a ring tone with a phonebook entry 11
Transfer by intercommunication 11

SMS Service 12
Sending a text message 12
Sending an SMS 12
View a message 13
Viewing the memory status 13
Emptying an SMS folder 13

SMS settings 14
Modifying the SMS centre numbers 14
Choose the SMS transmission centre 14

Call log 15
Viewing the received and dialled call log 15
Calling the last number dialled (Redial) 15
Calling a number listed in the dialled and received call log 15
The events log 15

Accessories 16
Alarm clock 16
Timer 16
Birthday alarms 17
Monitoring a room 17

Ring tones 18
Changing the ring tones 18
Activating or deactivating the beeps 18
Activating/deactivating the silent mode 18

Settings 19
Programming a key 19
Modifying the date and time 19
Using the auto hang up and pick up features 19
Modifying the Voice box number (according to operator) 19
Modifying the language 19
Security 19
Advanced settings / Handset settings 21
Advanced settings / Base settings 22
Advanced settings / Line settings 22

Appendix 24
Care and Maintenance 24
Problems 24

Technical characteristics 25
Initial condition 25
Features 25

Guarantee 26
Terms and Conditions 26
Service Enquiries 26

Information

Dear customer,

Congratulations on buying your Azurite D32T DECT telephone and thank you for placing your confidence in us. You can also contact our helpline (see Services Enquiries for further details).
To operate the device safely and easily, please read the following sections carefully :

Safety information

- Do not install your DECT telephone in a damp environment, such as a bathroom, washroom, kitchen etc, and not within 1.5 metres of a source of water or outdoors. This device is designed for use in temperatures of between 5° C and 45° C.
- Only use the power unit supplied and connect it to the electricity mains in accordance with the installation instructions in this user manual and the details on the sticker regarding voltage, electrical current and frequency. As a precaution if there is a risk of danger, the power plug can be pulled out to disconnect the 230 volt power supply. Therefore the sockets should be near the device and easily accessible.
- This device is designed to be used for connecting to the public telephone network. If problems should arise, contact your nearest Telkom retail outlet or contact our helpline (See “Service Enquiries”, page 26.). Only use the telephone cable supplied.
- For safety reasons, never put the handset in the base station without the battery inserted or without the lid on the battery compartment as this could cause an electric shock.
- To avoid damaging your handset, only use certified rechargeable batteries NiMH 1.2 V 650 mAh, never use non rechargeable batteries. Insert the batteries in the handset battery compartment respecting polarity.
- The used batteries must be disposed of in line with the recycling regulations in this user manual.
- Your DECT telephone has a range of approx. 50 metres indoors and up to 300 metres outdoors. The range can be affected by the proximity of metal objects, such as a television and electrical devices.
- Certain medical equipment and highly-sensitive machines or security systems may be affected by the transmission power of the telephone. In these cases we recommend adhering to the safety information.
- In regions greatly affected by electrical storms we recommend that you protect your telephone circuit with an overvoltage protection device.
- **You cannot make calls with the device if there is a power cut. Therefore keep another telephone at the ready in the event of an emergency.**

CE The CE label confirms that the product complies with the 1999/5/EC regulations of the European Union Parliament regarding wireless systems and telecommunications for user protection and for preventing electromagnetic interference. This ensures the allocated communication network is used properly and radio interference is avoided.

Application information

This telephone is ti be used only for transmitting voice messages via telephone networks.

Environment

Preservation of the environment iis of great concern to us.
Our desire is to operate systems with consideration to the world around us and consequently it has been decided to integrate environmental performance with the life cycle of our products, from manufacturing and commissioning, to operation and disposal.

Batteries

The batteries contained in this product must be disposed of responsibly, e.g. at appropriate collection points provided by your local authority.

The product

The crossed out dustbin displayed on the product signifies that it belongs to the electrical and electronic equipment group. Please ensure that you carry out your own selective recycling collection at:

- the sales outlet when you buy a similar new device.
- the collection points available in your area (recycling centres, sorting points, etc).

This means you participate in the recycling and valorisation of used electric and electronic goods which would otherwise have a negative impact on the environment and health.

Caller display

To use ’Caller ID’ (caller display), this this function has to be activated on your phone line. In South Africa you need a separate subscription from the service providor to activate this function. If you don’t have the Caller ID function on your phone line, the incoming telephone numbers will NOT be shown on the display of your telephone. Note that IdentiCall is Telkom’s Caller display service. Ring 10219 for further information.

ICASA

The ICASA marking certifies that the product meets the essential requirements of the South Africa directive and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for health and safety of users, for electromagnetic interference. Furthermore it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference.

Setting up/range

Place the base station somewhere central and easily accessible where you want to use it.
Depending on the ambient conditions, the range can be up to approx. 300 metres outdoors. It has a range of up to 50 metres indoors depending on the space and structure of the building.
The structure of the building can cause signal shadows to occur. This can lead to short interruptions when speaking due to the weak signal.

The connection breaks up temporarily when there is insufficient field strength.

Generally, the feet on the base will not mark the surface on which it is standing. However, due to the variety of treatments available we cannot guarantee that this will not occur and accept no liability for any such damage. If you have concerns about this type of damage, we suggest you place a non-slip mat under the device.
Do not operate the base station or charger outdoors or in an area susceptible to frost.
The recommended ambient temperature for operating the base station is +5° C – +45° C, the recommended relative air humidity is 20 % to 75 %.
The installation location must have a mains socket for 230 volts for the base station and charger (for additional handsets).

About the Azurite D32T

Unpacking

First of all, before unpacking everything, ensure that the box contains the following items :

- one base,
- one handset,
- one battery compartment cover,
- one equipped power adapter,
- one telephone line cord,
- two rechargeable batteries,
- this user guide.

In the case of purchasing a pack duo or trio, you will find in addition for each additional handset :

- a handset charger,
- an additional battery flap,
- two additional rechargeable batteries.

If you have purchased an additional handset pack, you will find:

- a handset,
- a handset charger,
- an additional battery flap,
- two additional rechargeable batteries,
- this user guide.

Your base

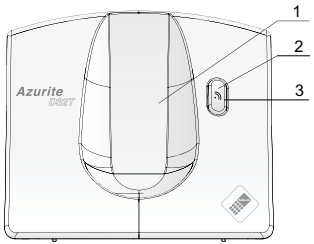

1. Handset location.
2. Base button
   Pressed briefly: handset paging.
   Held down: handset registration.
3. Power indicator light
   Fixed blue indicator: Powered.
   Flashing blue indicator: (handset on line, handset paging, handset registration).

Your handset

With its user-friendly design, you will appreciate how easy it is to hold and its quality during conversations.

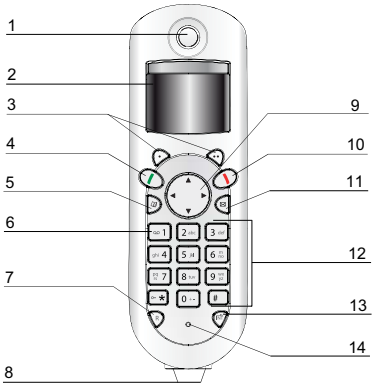

1. Speaker.
2. Visual display.
3. Program keys.
4. Pick up / Handsfree / Redial (long press) / turn on the handset.
5. Phonebook key.
6. Access to voice messaging service (Press and hold)*.
7. Key R (call management).
8. Handset charging contacts.
9. Browser Keys.
10. Hang up / turn off the handset.
11. Direct SMS access.
12. Alphanumeric keypad.
13. Intercommunication key (handset intercom).
14. Microphone.
15. Loudspeaker on the back of the handset.

* *For PABX phones the voice mail number can be programmed. To change it, refer to "Modifying the Voice box number (according to operator)", page 19.*

The visual display of your handset

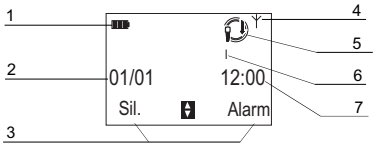

1. Battery indicator.
2. Date.
3. Names of functions programmed for the and keys. To change these functions, refer to paragraph “Programming a key”, page 19.
4. Network indicator.
5. Low transmission icon: This is displayed to indicate that the low-transmission mode is active. When the handset is moved away from the base, the icon disappears and the low-transmission mode is deactivated.
6. Number of handset.
7. Time.

When the battery charge icon is at minimum, your screen will not be lit and the volume level of the handsfree function will be decreased until the battery is recharged.

ECO mode

Your telephone is provided with an automatic power management system.

When the handset is near to the base, the power required for transmitting is reduced to a minimum and the icon is displayed on the screen.

In addition, a high efficiency mains power unit reduces the power consumption of the base.

Connecting the base

Before making any connections, please refer to the safety instructions given on page 2.

On the underneath of the base, insert jack on the telephone cord in its socket (as shown in the illustration) and connect the other end of the cord to the telephone wall socket.

Connect the end of the mains power unit lead to the bottom of the base and plug the mains power unit into the mains socket.

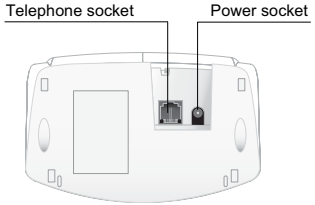

Handset set-up

Insert the batteries in the battery compartment ensuring the correct battery polarity, as shown on the label in the handset. Place the cover back on the handset by pushing upwards until it is completely closed.

Remove the protective film on the screen, place the handset on the base to fully charge the batteries.

The charging icon appears on the screen to indicate the charging status.

To ensure optimum charging, leave the handset on the base for at least 20 hours when using the telephone for the first time. During charging, the batteries may heat up. This is quite normal and perfectly safe.

Handset turning on and off

To turn on your handset, hold down the green key . The name **TELKOM** is displayed on the screen.

To turn off the handset, hold down the red key until the "**POWER OFF**" is displayed briefly on the screen. Your handset is now switched off.

About the Azurite D32T

Replacing the batteries

Hold down the red key to turn off the handset. Turn it around so that the battery compartment is accessible.

Remove the battery compartment cover by pressing down on the raised bead whilst sliding the cover downwards.

Remove the old batteries, insert the new batteries ensuring correct polarity as shown on the label in the handset.

Refit the battery compartment cover.

Worn out batteries must be disposed of, in accordance with the disposal instructions on page 2 of this booklet.

To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 650 mAH. Never use non rechargeable batteries.

Browsing through the menus

The browser

The browser allows you to browse through your telephone's menus.

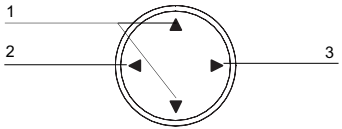

1. Browsing through menus (previous, next).
2. Cancelling, deleting or returning to the previous menu.
3. Validating or accessing a sub-menu.

Operation using menus and keys

To access the list of menus, press the key ▲ or ▼.

Using the browser to select the menu you want.

- Press the ▲ or ▼ browser keys to display the menu you require.
- To enter the selected menu, press the key.
- To return to the previous menu, press the key.
- In the menu, select the functions by pressing the browser keys ▲ or ▼ and store the settings by pressing the key.
- Once you have selected or set the function, you can return to the previous menu (key) or quit the menu (key).

The key provides direct access to the Phonebook.

The key provides direct access to the SMS menu.

Example: *change the handset ring tone for external calls:*

1. Press keys ▲ or ▼ to access the menu list.
2. Select **RING TONE** using key ▲ or ▼, and press key to enter the menu.
3. Select **EXTERNAL CALL**, and press key to enter the menu.
4. Select the handset tone using keys ▲ or ▼, and press key to confirm your selection.
5. Press **Volume**.
   Adjust the ring tone volume using the keys ▲ and ▼, and press **Valid.**.
   OK is displayed and the display returns to the External call menu.
6. Press key to quit the menu.

Telephoning

On receiving a call your telephone rings. If you have subscribed to Telkom's «Caller display» service, the caller's information appears on the screen (unless your caller has restricted the sending of such information), otherwise the «UNKNOWN» screen is displayed. Note that IdentiCall is Telkom's Caller display service. Ring 10219 for further information.

Making a call

Dial your contact's number; the numbers are displayed in large characters.

Press the green key.

You can also make a call by:

- Pressing the green key.

- Dial the number.

During communication, you can increase or decrease the audio volume of your handset by pressing the ▲ or ▼ key on the browser.

Receiving a call

Pick up by pressing the green key.

During a call

During a call, press **Menu**.

Select the desired option in the following list:

- **HANDSFREE**: to activate the handset speaker.
- **CALL TRANSFER**: to transfer the call to another handset.
- **SECOND CALL**: to make a second call.
- **PHONEBOOK**: to access the phonebook.
- **CALLS**: to access the call log.
- **SECRET**: to mute the handset microphone.

Handsfree

Press **Menu**.

Select **HANDSFREE**. Press **Activ.**.

Pressing the green key during a call allows you to activate or deactivate the handsfree mode directly. A confirmation screen is displayed.
When the battery charge icon is at minimum the handsfree function is turned off until the battery is recharged.

Increase or decrease the audio volume using ▲ or ▼.

Call transfer

This function is only accessible when two handsets or more are registered to the same base.

During communication, press **Menu**.

Select **CALL TRANSFER**. Press **Valid.**.

Select the handset you want to call. Press **Call**.

The handset called rings, once someone picks up transfer the call by pressing the red key.

To retake the call before it is picked up by the handset called, press **Menu**.

Select **HANGING UP**. Press **Valid.**.

Second call

During a call, you can receive a second incoming call or place a call to a second contact. You can then switch from one contact to the other, or have a conference (depending on your service provider and subscription). Note that the Telkom Services required are Waiting Call and Three-Way Calling (ring 10219 for further information).

Receiving a second call

During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting.

The screen displays the number of the second call.

- To accept a second incoming call, press:
  R + 2 abc.
  The first call is put on hold and you can talk to the second call.
- To switch back to the first call and put the second call on hold, press: R + go 1.
- To Make a second call during communication, press: R + recipient number.

To set up a 3 way-call (the two parties and yourself)

Press R + 3 def.

Accessing the phonebook or call log

During a call, press **Menu** .

Select **PHONEBOOK** or **CALLS** and press **Valid.** .

Return to the communication menu using .

Mute mode

To activate mute mode:

During a call, press **Menu** .

Select **SECRET** . Press **Activ.** .

The **SECRET MODE** message will appear on the screen and you can talk without the other party hearing your conversation.

To deactivate mute mode:

Press **Exit** .
The other party will be able to hear you again.

To activate the mute mode, press and hold down key ◂ .
To deactivate it, press key ◂ again.

Ending a call

Press the red key .

Communication between two handsets

To communicate between handsets, both handsets must be registered to a single base, and must be within range of the base.

Calls between handsets are not counted in the time credit.

To call another handset, press the INT key.

Select with the desired handset. Press **Call** .
The handset rings. Pick up on the second handset using the green key .

To end the call, press the red key .

You can also easily call another handset if you know its number.
From the idle screen, enter the number of the handset. Then press the green key .

Your phonebook

You can store 100 entries in the phonebook.
Each phonebook entry can contain the name of your contact which can be a maximum of 12 characters long (spaces included), the telephone number of your contact up to 24 digits and an icon identifying the type of number (work, home, mobile or facsimile).

Viewing the phonebook

Go to the menu **PHONEBOOK**.

The list of phonebook entries organised in alphabetical order appears.

*The first time you access your phonebook, only the **NEW ENTRY** element appears in the list.*

Select the entry you want to view. Press ▸.

Once the entry appears on the screen, press to display the actions available via the phonebook entry:

- **VIEW**: to view the entry data.
- **CALL**: to call the number associated to the entry.
- **EDIT**: to edit the entry.
- **SEARCH**: to search for another entry.
- **RING TONE**: to assign a unique ring tone to that entry.
- **SEND SMS**: to send an SMS to a number associated with the entry.
- **ADD NUMBER**: to enter a new number for the same name.
- **NEW ENTRY**: to create a new entry in the phonebook.
- **DELETE**: to delete the entry from your phonebook.
- **TRANSMIT** : to send one entry, several entries or the whole phonebook to another handset registered to the same base.

Select the action you require. Press **Valid.**.

Creating an entry

Alphanumeric keypad key correspondence.

1	1
2 abc	A, B, C, a, b, c, 2
3 def	D, E, F, d, e, f, 3
4 ghi	G, H, I, g, h, i, 4
5 jkl	J, K, L, j, k, l, 5
6 mno	M, N, O, m, n, o, 6
7 pqrs	P, Q, R, S, p, q, r, s, 7
8 tuv	T, U, V, t, u, v, 8
9 wxyz	W, X, Y, Z, w, x, y, z, 9
*	special characters (see table page 12)
0	space, +, @, -, $, &, %, 0, /
#	# , " . : ; ! ? ' ( ) _

Go to the menu **PHONEBOOK**.

Select **NEW ENTRY**, press **Valid.**.

Enter the name of your contact (12 characters maximum). In case of a mistake, press ◂. Once you have made your changes, press **Valid.**.

Enter the contact's telephone number (24 *digits* maximum). In case of a mistake, press ◂.

Once you have made your changes, press **Valid.**.

select the icon that corresponds to the type of number.

Press **Valid.**.

: *HOME* : *MOBILE*

: *WORK* : *FAX*

Calling using the phonebook

Go to the menu **PHONEBOOK**.

Select the required contact.

Press the green key .

Searching for a contact

When using the phonebook, you can search for a contact by:

- *navigating through the list using ▲, ▼,*
- *using quick search,*
- *using advanced search.*

Performing a quick search

Access your phonebook, and enter the first letter of the name you are searching for.
Wait unti the first name in the phonebook starting with that letter is displayed and then scroll to the required name .

Performing a advanced search

In the phonebook menu, press **Option**.

Select **SEARCH** using the ▲ or ▼ keys. Press **Valid.**.

Enter sufficient letters to uniquely identify the contact you are searching for, for example, you could enter PE to search for Peter.

Editing an entry

To edit a phonebook entry, enter the phonebook, select the entry you want to edit and press **Option** .

Select **EDIT**. Press **Valid.** .

You enter the name input screen.

- If the information is correct. Press **Valid.** .
- To edit the name, press ◂ to delete incorrect characters. Make your corrections.
  Press **Valid.** .

You enter the number input screen.

- If the information is correct. Press **Valid.** .
- To edit the number, press ◂ to delete the incorrect numbers. Enter the new number and press **Valid.** .

The current icon is displayed. If necessary change the icon. Press **Valid.** .

Deleting an entry

To delete an entry, enter the phonebook, select the entry, press **Option** .

Select **DELETE**. Press **Valid.** .

A confirmation screen asks you if you wish to delete the entry.

- If you do not wish to delete the entry, press **No** .
- To delete the entry, press **Yes** .

Sending a SMS from phonebook

Go to the menu **PHONEBOOK**.

Select the contact. Press **Option** .

Select **SEND SMS**. Press **Valid.** .

A text input screen appears. Refer to paragraph "Sending a text message", page 12.

Associating a ring tone with a phonebook entry

To receive the caller's information Telkom's caller display service must be active. Ring 10219 for further information.

Go to the menu **PHONEBOOK**.

Select the entry with which you want to associate a ring tone, press **Option** .

Select **RING TONE**, press **Valid.** .

Select the ring tone of your choice. Press **Valid.** .

Transfer by intercommunication

Each handset has its own phonebook. However, the phonebook menu transfer function allows you to easily transfer the phonebook from one handset to another.

Go to the menu **PHONEBOOK**.

Select the contact. Press **Option** .

Select **TRANSMIT**. Press **Valid.** .

BY INTERCOM appears on the screen. Press **Valid.** .

Choose the transfer required,i.e. one number (ONE ENTRY), a block of numbers (MANY ENTRYS) or the entire phonebook (ALL ENTRIES) . Press **Valid.** .

Choose the handset to which you wish to transfer the phonebook. Press **Call** .

The receiving handset rings. Pick up by pressing the green key .

A screen is displayed, asking you to accept the transfer mode. Press **Yes** .

Depending on the type of transfer you selected, follow one of the procedures below :

- To transfer the entire phonebook, wait while the transfer takes place. Once the operation is done, a screen indicating the end of the transfer will appear.
- To transfer a number, take the sending handset and do the following :
  - Select the number to be transferred using the ▲ or ▼ keys.
  - Press **Transf** to send it to the receiving handset.
    Wait for the transfer to be made. Once completed, a screen indicates that the transfer has been made.
- If you have chosen to transfer several numbers, take the sending handset and do the following :
  - Select one of the numbers in the phonebook using the ▲ or ▼ keys.
  - Press **Transf** to send it to the receiving handset.
    Wait for the transfer to be made. Once completed, you are returned to the list of numbers in the phonebook.
  - Select the next number using the ▲ or ▼ keys and press **Transf** .
    Perform the operation until you have transferred all the numbers that you want to transfer.

SMS Service

You can use your DECT telephone to send, receive and track SMS messages. You can send SMS messages either another fixed SMS-capable telephone or a mobile telephone.

You must subscribe to your Network Provider's Caller Display and SMS Messaging services so that you can use the SMS Services and you must not withhold your telephone number.
The Telkom Caller Services required are IdentiCall and Home SMS. Call 10219 fo further details.
If you register for SMS Messaging, messages to your number will be delivered in text. If you are not registered for text messaging, messages to your number will be converted to voice and delivered to your number as voice calls.

Sending a text message

Writing a text message

Go to **SMS / EDIT SMS**.

Replace sentence with "To change the character case to uppercase, press and hold the [*]. After releasing the key all characters entered will be in uppercase.

Alphanumeric keypad key correspondence depending on the activated mode (capital letters or small letters).

- [1]: ', 1, #, ,, ., :, ?, _, *
- [2 abc]: a, b, c, 2
- [3 def]: d, e, f, 3
- [4 ghi]: g, h, i, 4
- [5 jkl]: j, k, l, 5
- [6 mno]: m, n, o, 6
- [7 pqrs]: p, q, r, s, 7
- [8 tuv]: t, u, v, 8
- [9 wxyz]: w, x, y, z, 9
- [*]: special characters
- [0]: space, 0, /, +, @, -, $, &, %
- [#]: #

Making a correction

If you enter the wrong character, press ◂ .

You can also move through the text to delete characters or insert new ones.

Set the cursor to the position where you want to insert or delete a character and press **Select**.

Select **INSERT CHAR.** or **DELETE CHAR.**. Press **Valid.**.

Uppercase/lowercase

Press **Select**. Select **CAPITAL LETTER** or **SMALL LETTER**. Press **Valid.**.

Special characters

Press the [*] button, select the desired character, use to confirm.

List of special characters:

	.	,	#	'	"	(	)	:	;	-	@	?	!
+	-	*	/	<	=	>	E	$	¥	&	%	à	ä
â	æ	é	è	ì	ñ	Ñ	ò	Ö	∅	ö	⌀	ù	ü
Ü	Ç	β	τ	Δ	Θ	λ	Ξ	Π	Σ	Φ	Ψ	Ω	Λ
{	}	\	[	]	▏								

Sending an SMS

Press **Select** to select the type of delivery.

You can choose between the following options:

- **SEND**: to send a message.
- **STORE**: to save your text as a draft. It can be sent at a later time.
- **CANCEL**: to permanently delete the text message that you just entered.

To transmit message

Select **SEND**. Press **Valid.**.

Enter or look up the number to be called in the phonebook (key [@]).

Press **Valid.**.

A confirmation screen appears.

- If the information is accurate. Press **Confirm**.
- To change the phone number, edit or modify your text message, press Modify. Press **Edit**.

At the end of the transmission.

- To save the message (in the **SMS messages sent** folder), press **Yes**.
- If you do not want to save the message, press **No**.

In the event of a delivery failure

FAIL is displayed if an SMS delivery failure occurs.

Press **CONT.**.

Different options come up on the screen:
- **SAVE**: to save your text in draft form.
- **TRY AGAIN**: to attempt a new delivery.
- **DELETE SMS**: to permanently delete your SMS.
- **SEE RECEIVER**: to check the phone number of the recipient or send the SMS again.
- **EDIT**: to change the delivery type and number or your text.

Choose an action. Press **Valid.**.

View a message

Your telephone has 4 different folders in which your SMS messages are stored.
- **NEW**: the messages not played back.
- **INBOX**: the played back messages that you have chosen to keep.
- **SENT**: the copies of sent messages that you saved.
- **DRAFT**: the messages that you wrote and that have not been sent out.

Go to **SMS** / **READ SMS**.

Select the folder containing the message you would like to view.

Press **Valid.**.

The list of messages contained in the folder is then displayed, starting with the most recent message to the oldest one.

The message reception date or time is highlighted on the top line.

Select the message you would like to view, press **Select**.

Select **READ**. press **Valid.**.

To return to the list of messages, move to the beginning of the message and press .

Managing read messages

Once the message has been read, press **Select** and select:
- **REPLY**: to write an SMS in response to the message received.
- **ARCHIVE**: to keep this message (in the **INBOX folder**).
- **TRANSMIT**: to forward this message to a new recipient.
- **DELETE**: to permanently delete this SMS.
- **CALL**: to call the SMS sender number.
- **STORE NUMBER**: to save the SMS sender number in your phonebook.
- **SMS MODE**: allows to display the message on one or two lines manually or automatic.

Modify the SMS mode

Three playback modes are available:
- **AUTO SCROLL**: automatic scrolling,
- **MANUAL SCROLL**: text scrolls automatically once you press or in the right direction,
- **2 LINES**: the text is displayed in 2 lines.

To activate a playback mode, go to **Select** / **SMS MODE**.

Select the SMS mode using ▲ or ▼. Press **Valid.**.

Viewing the memory status

You can store 30 different SMS messages which can be distributed between the various folders.

Once the number of stored SMS has reached 30, an information message will indicate that no new messages can be stored.

Go to **SMS** / **MEMORY**, press **Valid.**.

A screen informs you as to the number of messages contained in each folder.

Emptying an SMS folder

This function is used to delete all the messages contained in a folder. To delete the messages one by one refer to paragraph "Managing read messages", page 13.

When you empty an SMS folder, any messages linked to a personal box will not be erased.

Go to **SMS** / **EMPTY BOX**.

Select the folder you want to empty. Press **Valid.** to delete all messages in the selected folder.

A delete confirmation screen appears.

- Press **No** if you do not want to empty the folder.
- Press **Yes** to empty the folder.

SMS settings

*You can access the **SETTINGS** menu via the **SMS** menu or the **ADVANCED SET.** submenu in the **SETTINGS** menu.*

Modifying the SMS centre numbers

You can enter up to 4 SMS centre numbers to receive and one to send.

By default, the send number is programmed in SMS 2 centre and the reception number in SMS 1 centre.

Go to **SMS** / **SETTINGS / SMS CENTERS**.

Select the SMS centre you want to enter or modify the number.

Press **Valid.** .

An information screen gives the number of the SMS centre.

- To change the number, press **Edit** . Enter the new number in the input screen and press **Valid.** .
- To keep the number, press **Confirm** .

Choose the SMS transmission centre

Go to **SMS** / **SETTINGS / SMS CENTERS / SEND CENTER**.

- To change the send SMS centre, press **Edit** . Select the required centre using keys ▲ and ▼ and press **Valid.** .
- To keep the current SMS centre, press **Confirm** .

Viewing the received and dialled call log

Go to **CALLS / INCOMING CALLS** or **OUTGOING CALLS**.

The presentation screen for the last call received or dialled appears.

This screen displays the following information (depending on the service provider and subscription):
- the full name of your contact,
- the telephone number, date, time and duration of the call.

The calls are organised in chronological order, from the most recent call to the oldest call.You browse through the log using ▲ or ▼ key.

By pressing **Option** , a list of various executable actions appears:
- **VIEW**: to view the selected call again.
- **CALL**: to call the number.
- **DELETE**: to delete the call currently viewed.
- **STORE NUMBER**: to store the name and number in the phonebook.
- **SEND SMS**: to send an SMS to your contact.
- **DELETE ALL**: to delete all calls.

Calling the last number dialled (Redial)

From the idle screen, press and hold the green key until the Call log screen appears.

Release , the last dialled number appears.

Press the green key again. The number is dialled automatically.

Calling a number listed in the dialled and received call log

Go to **CALLS / INCOMING CALLS** or **OUTGOING CALLS**.

Browse through the log until the number you wish to call is displayed.

Press the green key .

The number is dialled automatically.

The events log

Viewing the events log

If one or more new events occurred during your absence, the information screen "**NEW EVENTS !**" appears.

- If you do not wish to view the event log at this time, press the red key .
- To view the event log, press .

A screen providing a summary the events which occurred (SMS, miss calls, operator voice mail system) while you were away is displayed.

Choose the event using ▲ or ▼. Press **Valid.** .

Activating/deactivating the new event information screen

The new event information screen can be deactivated. The events which have occurred can then be viewed in the Calls Log/Event/View menu. The default setting is active.

Go to **CALLS / EVENTS / ACTIVATE** or **DEACTIVATE**.

If the "**DEACTIVATE**" option is set, you can view new events as follows:

Select **VIEW** and press **Valid.** .

Select the event by pressing **Valid.** .

Accessories

Use this menu to access the following features:

- ***Alarm clock**: to use your handset as an alarm clock.*
- ***Timer**: to remind you of an event.*
- ***Birthday**: the handset will ring at the set date and time to remind you of the name of the person to whom you would like to wish happy birthday.*
- ***Monitoring a room**: use a handset to monitor a room.*

If the alarm set occurs (wake up, timer, anniversary and agenda) during a call, the handset will ring at the end of the call.

Alarm clock

When the alarm is triggered the selected ring tone sounds for 60 seconds and an alert screen is displayed. To turn off the alarm press any key on the handset.

Setting the alarm clock

Go to **ACCESSORIES** / **ALARM**.

An information screen shows the alarm clock status.

- To keep these settings, press **Valid.**.
- To change the alarm time or status, press **Edit**.

Activating or deactivating the alarm clock

Select **ACTIVATE** or **DEACTIVATE** in the list. Press **Valid.**.

The alarm settings information screen appears showing the new status. Press **Valid.**.

Changing the alarm clock ring tone

To modify the alarm clock ring tone, select **RING TONE**. Press **Valid.**.

Select the desired ring tone using ▲ or ▼.

Press **Volume**.

Press ▲ or ▼ to increase or decrease the volume.

Press **Valid.**.

An information screen shows the alarm clock settings, press **Valid.**.

Modifying the alarm clock time

Select **SET TIME**. Press **Valid.**.

Enter the time at which you would like the alarm clock to sound. Press **Valid.**.

Press **Yes** to activate the alarm.

Timer

If the timeout occurs whilst a call is in progress the alarm will not sound until the call is completed. For access to timer adjustment you must stop it once it is started.

The timer has a maximum setting of 99 minutes. Once the specified time has elapsed, the handset rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing **Stop**. The handset stops ringing.

Go to **ACCESSORIES** / **TIMER**.

- To start the timer without changing the displayed delay, press **Start**.
- To change the programmed time, press **Edit**.

A list showing the different settings appears.

Changing the programmed time of the timer

Select **SET DURATION** from the list. Press **Valid.**.

Enter the desired time (between 1 and 99 minutes). Press **Valid.**.

Press **Return** to display the timer activation screen.

The timer activation screen appears with the modification. Press **Start** to start the timer.

Displaying or hiding the programmed time of the timer

Select **VIEW** in the Timer menu using ▲ or ▼. Press **Valid.**.

SHOW TIMER is displayed.

If you want to show the timer, press **Yes** else press **No**.

Press **Return**.

The timer start screen is displayed. Press **Start** to start the timer.

Changing the timer ring tone

To modify the timer ring tone, select **RING TONE**. Press **Valid.**.

The list of ring tones appears, the handset plays the ring tone.

Select the ring tone. Press **Volume**.

Press ▲ or ▼ to increase or decrease the volume. Press **Valid.**.

Press **Return**.

Start the timer by pressing **Start**.

Birthday alarms

You can programme birthday alarms (10 alarms) on your DECT telephone.

Adding a new birthday alarm

Go to **ACCESSORIES** / **BIRTHDAY** / **NEW ENTRY**.

Enter the name of the person concerned using the keypad keys. Press **Valid.**.

Enter the birth date using the keypad keys. Press **Valid.**.

Enter the alarm activation time. Press **Valid.**.

Viewing a birthday alarm

Select the alarm you would like to view, and press **Valid.**.

Modifying or deleting a birthday alarm

Select the alarm you wish to edit. Press **Option**.

The following options are available:
- **EDIT**: to change the alarm name or date.
- **DELETE**: to remove a birthday or organiser alarm.
- **RING TONE**: to set the ring tone that will sound when the alarm goes off.
- **NEW ENTRY**: to set up a new birthday alarm.

Monitoring a room

Two handsets are required which must be registered on the same base to use this function. Use this function to for example, monitor a room in which a child is sleeping.
To do so, place one of the handsets in the room to be monitored. This unit will be in "sender" mode.
The other handset which will remain with you, is in "receiver" mode.

<u>On the receiver handset:</u>

Go to **ACCESSORIES** / **ROOM MONITOR**.

Select the sender handset. Press **Call**.

The sender handset rings, pick up using the green key.

<u>On the transmitter handset:</u>

A screen invites you to activate the monitor mode (sender mode). Press **Yes**.
Both handsets are now in monitor mode.

- Place the sender handset in the room to be monitored.

The handset in sender mode does not ring to notify you of incoming calls.

- Keep the receiver handset with you.

When in monitor mode, the receiver handset can be used to make calls.

To make a call: press **Call** *and dial the number.*

To answer a call: press green key.

At the end of the call, the handset will automatically return in monitor mode.

<u>To stop monitoring:</u>

- Press **Stop** on the sender handset. The receiver set will automatically return to the standby screen.
- Press **Stop** on the receiver handset and confirm by pressing **Yes** and **Stop** on the sender handset at the same time.

Ring tones

Changing the ring tones

This menu enables you to associate a unique ring tone to incoming calls or internal calls (intercom).

Go to **RING TONE / EXTERNAL CALL** or **INTERNAL CALL**.

Select the ring tone of your choice using the ▲ or ▼ keys then press **Volume**.

Adjust the ringer volume using ▲ or ▼, press **Valid.**.

Activating or deactivating the beeps

Go to **RING TONE / BEEPS**.

Select the beep type using ▲ or ▼. Press **Valid.**.

KEYTONE: the handset beeps when a key is pressed.

BATTERY LOW: the handset beeps when the battery is too low.

CHARGER: the handset beeps when you hang up the handset.

An information screen displays the beep status for the selected item.

- To change the status, press **Edit**. The status is modified on the screen. Press **Valid.**.
- To keep the status, press **Valid.**.

Activating/deactivating the silent mode

When in silent mode, the telephone ringer and keypad beeps are disabled.

Go to **RING TONE / SILENT MODE**.

Press **Yes** to activate the silent mode.

When you activate the silent mode, your handset is muted for all timer, organiser-type functions...

Programming a key

This function enables you to program the and keys on your handset. Functions that can be programmed are; Redial, Number (dial an entered number), Key Lock, Timer, Alarm and Silent Mode.

Go to **SETTINGS** / **PROGRAM KEYS**.

The screen displays the function currently assigned to the key.

- To keep the function, press **Valid.**.
- To modify the function, press **Edit**. Choose from the function list the function you want to assign to the key. Press **Valid.**.

A screen prompts you to programme the key.

- To modify the function, press **Edit**.
- To keep the function, press **Valid.**.

Modifying the date and time

Go to **SETTINGS** / **DATE/TIME**.

Enter the date in DD/MM/YY format and press **Valid.**.

Enter the time in HH/ MM format and press **Valid.**.

Using the auto hang up and pick up features

Go to **SETTINGS** / **AUTO PICKUP** (**AUTO HANG UP**).

Setting Auto hang up to ON ensures that a call in progress is terminated when the phone is returned to the base.

Setting Auto pickup to ON means that a call is automatically answered when the phone is removed from the base.

The screen displays the current status.

- To change the status, press **Edit**.
- To keep the status, press **Valid.**.

Modifying the Voice box number (according to operator)

This function allows you to set your voice mail number on line.

***NOTE:** If your handset is a PBX phone and the PBX has a voicemail messaging service, your handset can inform you when you receive a new voicemail. This feature may not work with all PBXs.*

To indicate that a new message has been received the reception indicator on the handset is lit in red and the new event message is displayed on the screen.

To check your voice messaging service, hold down key 1.

The number of your voice messaging service is set in the factory. To change this number, proceed as follows:

Go to **SETTINGS** / **VOICE BOX No**.

The programmed number is displayed on the screen,

- If the number is correct, press **Valid.**.
- To modify the number, press **Edit**.

Modifying the language

Go to **SETTINGS** / **LANGUAGE**.
Options are English (default), German, Spanish, Italian, Portugueuse and French.

An information screen displays the current language setting.

- To keep the setting, press **Valid.**.
- To change the setting, press **Edit**.

Choose the required language from the language list. Press ▲ or ▼ to select the language. Press **Valid.**.

The screen shows the new language used. Press **Valid.**.

Security

Locking/unlocking the keypad

Go to **SETTINGS** / **SECURITY** / **KEYPAD LOCK**.

- To lock the keypad, press **Yes**. The message "**KEYPAD LOCKED LONG PRESS ON * FOR UNLOCK**" is displayed on the screen.
- If you do not wish to lock the keypad, press **No**.

*To lock/unlock the keypad, press and hold the keypad key * for some time.*

Programming an emergency number

This function allows you to program an emergency number which once entered can be enabled or disabled.

Once it is activated, the emergency number will be automatically dialled when the green key is pressed from the idle screen.

- *To call a number (other than the emergency number) once the emergency number is active either use the phonebook or call log functions or simply dial the number via the keypad and then press .*

This function is meant for personal emergency numbers such as relatives or carers. Emergency numbers such as Fire,Ambulance and Police services should not be programmed.

Go to **SETTINGS** / **SECURITY** / **EMERGENCY**.

The time and date display is replaced by EMERGENCY on the idle screen when an emergency number is programmed and enabled.
An information screen displays the current stored emergency number and indicates whether it is enabled or disabled.

- To keep the setting, press **Valid.** .
- To modify the setting, press **Edit** .

A list of various executable actions appears:
- **ACTIVATE**: to activate the emergency number.
- **DEACTIVATE**: to deactivate the emergency number.
- **CHANGE NO**: to modify the emergency number.

To modify the emergency number, select **CHANGE NO**. Press **Valid.** .

Enter the new number using the keypad.

To enter a number from the phonebook, press .

Make your selection and **Valid.** .

Press **Valid.** to confirm the number. The mode changes to active automatically.

Defining the call time limit

You can set your telephone's operating time.
Once the call time limit is reached, you can no longer make calls.
To enable calls again, you must either deactivate the call time limit or set a new limit.

If the time limit ends during a telephone conversation, communication will not be cut off. Once you have hung up, it will not be possible to make a new call.
Calls between handsets (internal calls) are not affected by the call time limit.

Go to **SETTINGS** / **SECURITY** / **TIME LIMIT**.

An information screen displays the remaining time limit and its status.

- To keep the setting, press **Confirm** .
- To modify the setting, press **Edit** . Enter the base code (default is 0000). Press **Valid.** .

A list of various executable actions appears:

- **ACTIVATE**: To activate the time limit.
- **DEACTIVATE**: To deactivate the time limit.
- **EDIT TIME**: To modify the time limit setting.

Select **EDIT TIME**. Press **Valid.** .

Enter the new time limit using the keypad (maximum 999 minutes). Press **Valid.** , the active mode is set automatically.

Defining barred prefixes - Call barring

You can prohibit the use of certain prefixes on your telephone. When a prefix is barred, you cannot to call numbers that begin with this prefix.

Depending on the programmed prefixes, certain numbers will no longer be accessible. For example, if you programmed 06 as a barred prefix, it will not be possible to call a number that begins with 06.

Go to **SETTINGS** / **SECURITY** / **RESTRICTION**.

Enter the base code. Press **Valid.** .

Select an empty location (dashes) or a prefix to modify. Press **Valid.** .

Enter the prefix using the keypad. Press **Valid.** .

Press **Return** .

ACTIV.RESTRICTION is displayed.

Press **Yes** to activate the restriction on that prefix.

Modifying the base (PIN) code

Go to **SETTINGS** / **SECURITY** / **CHANGE CODE**.

Enter the old base code using the keypad (default is 0000). Press **Valid.** .
Enter the new base code using the keypad. Press **Valid.** .

Confirm by entering the new base code again. Press **Valid.** .

Authorising listening in

The intrusion function authorises or prevents a second handset registered on the same base from joining in a current conversation. If the intrusion mode is active, it is possible to join a call in progress using another handset.

Go to **SETTINGS** / **SECURITY** / **INTRUSION**.

- To change the status from OFF to ON or vice-versa, press **Edit**.
- To keep the status, press **Valid.**.

Advanced settings / Handset settings

Registering a new handset to a base

On the handset to be registered:

Go to **SETTINGS** / **ADVANCED SET.** / **SET HANDSET** / **REGISTRATION**.

Press **Yes** to put the handset in registration mode.

The handset enters the registration mode.

On the base:

press on the button on the base for a few seconds.

The green light blinks rapidly.

The base is in registration mode.

The new handset and the base are mutually searching for each other. The registration may take several seconds.

Once the handset is registered, the handset automatically exits the registration mode and indicates that the registration is complete.

Modifying the base preference

This function enables you to specify which base will be used by your handset to make calls (if your handset is registered to several bases).

Go to **SETTINGS** / **ADVANCED SET.** / **SET HANDSET** / **BASE PRIORITY**.

An information screen presents the current base preference for your handset.

- To keep the preference, press **Valid.**.
- To modify the preference, press **Edit**. Select the priority base (selecting automatic avoids having to specify a priority), press **Valid.**.

Resetting the handset

When you reset your handset, all the parameters are reset to their initial value (factory settings) with the exception of the phonebook, alarms (birthdays and organiser) and SMS parameters and security functions.

Go to **SETTINGS** / **ADVANCED SET.** / **SET HANDSET** / **RESET HANDSET**.

A confirmation screen will prompt you to confirm your request:

- To re-initialise your handset, press **Yes**.
- If you do not wish to re-initialise your handset, press **No**.

Personal registering

Registration may be required in the following circumstances:

- *the base's code is no longer 0000 (you have customised the code),*
- *you own several bases,*
- *you want to choose a name for your base,*
- *you want to choose the handset registration number.*

Go to **SETTINGS** / **ADVANCED SET.** / **SET HANDSET** / **PERSON. REGISTR**.

Select the required base number. Press **Valid.**.

Delete the current base name (if necessary).

Enter the new name, press **Valid.**.

Enter the PIN code for the base. Press **Valid.**.

The handset enters the registration mode, "**HANDSET IN REGISTR. MODE**" is displayed on the screen.

Put the base to which you want to register the handset in registration mode following the procedure described in the 'On the base' paragraph, below.

Once the handset is registered, select the required handset number. Press **Valid.**.

On the base:

Press button on the base for a few seconds.

The blue light blinks rapidly.

The base is in registration mode.

The new handset and the base are mutually searching for each other.

The registration may take several seconds.
Once the handset is registered, the handset automatically exits the registration mode and indicates that the registration is complete.

Advanced settings / Base settings

Using a handset to put the base in registration mode

Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **REGISTR. MODE**.

Press **Yes** to enter the registration mode. The indicator light on your base starts to quickly blink blue.

Your base will remain in registration mode for about 1 minute.

Resetting the base

When you reset the base, all the base parameters are reset to their initial values (factory settings).

Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **RESET BASE**.

Press **Yes**.

Enter the base code. Press **Valid.**.

The **RE-INIT. IN PROCESS** message is displayed on the screen.

When resetting the base, code is reset to 0000.

Deregistering a handset

Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **DELETE HANDSET**.

Select the handset you wish to deregister. Press **Valid.**.

A screen prompts you to confirm the deregistration.

Press **Yes** to deregister the handset.

Renaming the base

Go to **SETTINGS** / **ADVANCED SET.** / **SET BASE** / **RENAME BASE**.

Select the base for which you want to modify the name. Press **Valid.**.

Enter the new name. Press **Valid.**.

Advanced settings / Line settings

The line settings should not providing that the telephone is connected to the Telkom network. If the telephone is a PABX phone then the line settings may require changing. Contact your PABX administrator if necessary.

Modifying the network type

Your DECT telephone can be installed on a public or private network (when using a PABX).
This function enables you to configure your telephone according to the type of network.

Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **NETWORK TYPE**.

A screen presents the current status.

- To keep the status, press **Valid.**.
- To change the status, press **Edit**.

The status is modified on the screen, press **Valid.**.

Modifying the dialling mode

The default dialling mode is tone which is the method used by all exchanges in the Republic of South Africa and should not be changed.

Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **DIAL**.

A screen displays the current status.

- To keep the status, press **Valid.**.
- To modify the status, press **Edit**.

The status is modified on the screen, press **Valid.**.

Modifying the flash duration (R key)

If you connect your telephone to a private automatic branch exchange (PABX) or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly when using the following functions: outgoing 2nd call, incoming 2nd call, 3 way calling.
Contact your service provider to obtain the correct flash duration and then modify it by doing the following.

Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **FLASHING**.

An information screen presents the current flash duration.

- To keep the duration, press **Confirm**.
- To modify the duration, press **Edit**.

Select the new duration using ▲ or ▼. Press **Valid.**.

The screen shows the new flash duration.

- To keep the duration, press **Confirm** .
- To modify the duration, press **Edit** .

Setting a PABX prefix

If you are connected to a PABX, you can program the prefix required to obtain an external line.

With this function you can set the:

- *PABX prefix number,*
- *dialled number length at which point the PABX will be automatically dialled (this length is called "digit before prefix"),*
- *prefix status (on or off).*

Go to **SETTINGS** / **ADVANCED SET.** / **SET LINE** / **PABX PREFIX**.

Press or key.

Press **Yes** , to modify this setting.

Select the required option:

- **ACTIVATE** / **DEACTIVATE**: to select a status.
- **PREFIX**: to enter the number giving you access to the external line.
- **EDIT LENGTH**: to specify the «digits before prefix».
- **EXIT PABX**: to exit the menu.

To modify the prefix, select **PREFIX**, press **Valid.** .

Enter the prefix using the keypad, press **Valid.** .

To modify the digits before prefix, select **EDIT LENGTH.**, press **Valid.** .

Enter the digits before prefix using the keypad, press **Valid.** .

Appendix

Care and Maintenance

Use a slightly damp cloth to wipe the base and handset, do not use a dry cloth as this may cause electrostatic charges.

Problems

If you experience problems with your telephone refer to the table below:

Problems	Remedies
The base indicator light is not lit.	Make sure that : • the power adapter is properly connected to a power socket. • the power connector is properly plugged into the base. • The fuse or circuit-breaker on your household supply is in working order and that the power socket is powered.
The handset display is blank.	Make sure the batteries are properly installed. Place the handset on the base and fully charge the batteries. To increase the life of your batteries, carry out the above about every two months. If the above checks do not resolve the problem, replacement batteries are available from telephone retailer. With time, you may notice a slight decrease in battery performance. Use your handset until the battery is fully discharged, and then charge for at least 20 hours.
The handset does not ring during an incoming call.	Make sure that the telephone line cord is properly connected to the base and telephone socket and that you have a dial tone. Make sure your telephone is not set to silent mode. See “Activating/deactivating the silent mode”, page 18.
No radio link between the handset and base. The network indicator icon flashes.	Make sure the handset is registered by moving closer to the base, if it is registered correctly, the handset screen should display its own handset number. Otherwise, register the handset to the base. See “Registering a new handset to a base”, page 21.
You obtain a "busy" dial tone for each dialled number.	Make sure no one else is using another handset (if the intrusion mode is deactivated). See “Authorising listening in”, page 21. Make sure that the dial mode is set to tone. See “Modifying the dialling mode”, page 22. Make sure your time limit has not run out (if activated). See “Defining the call time limit”, page 20. Make sure you are not on call restriction (if activated). See “Defining barred prefixes - Call barring”, page 20.
You cannot send or receive SMSs.	Check you are subscribed to your Network Provider’s Caller Display and SMS Messaging services. The Telkom Caller Services required are IdentiCall and Home SMS. Call 10219 for further details. Confirm that the SMS service is activated on your line. Obtain the SMS Centre numbers from your service provider and make sure they are identical to the numbers on your handset.

Initial condition

Accessories

Alarm clock	Off
Timer	Off
Room monitor	Off

Ring tone

Ringer (Ext/Int)	Africa / Amazone
Silent mode	Off
Beeps	All active

Settings

Program keys	Silence / Alarm
Date/Time	00:00 // 01/01/09
Auto Hang up	On
Auto Pick up	Off
Language	English

Security

Keypad lock	Off
Emergency	Off
Base code	0000
Time limit	Off
Restriction	Off
Intrusion	Off

Advanced settings

Network type	Public
Dial	Tone
Flashing	250 ms
PABX prefix	Off
Base name	Base 1

Features

Standard	DECT, GAP
Number of channels	120
Radio frequency band	1,88 - 1,90 GHz
Duplex mode	TDMA
Spacing between Channels	1,728 MHz
Bit rate	1152 Kbit/s
Modulation	GFSK
Vocoding	ADPCM
Transmitting power	250 mW
Base operating voltage	230 V , 50/60 Hz
Charging time	20 hours
Range up to	300 m outdoors and up to 50 m inside buildings

Electrical power supply:

Power supply unit	230 V, 50 Hz, 20 mA
Batteries	Type Ni-MH, AAA, 2 x 1,2 V 650 mAh

Handset operating time:

Talk time	up to 12 hours*
Standby time	up to 120 hours*

Ambient temperature	+5°C to +45 °C

Dimensions :

Base (W x H x L)	115 x 100 x 67 mm
Handset (W x H x L)	150 x 50 x 30 mm

Weight :

Base	120 g
Handset	140 g

Connection:

Connecting cable	TAE 6F/TSV 6/4

* When the base is not supplied with power (e.g. during a power failure), the handset continues to search for a base.

Subject to changes and errors.

Guarantee

Terms and Conditions

The Azurite D32T carries a 12 month warranty. Please keep your receipt as proof of purchase for warranty purposes.
The warranty is covered by Telkom's Terms and Conditions of Warranty.
If repairs under the guarantee are required you should contact your dealer or our Helpdesk (see Service Enquiries below). Note that proof of purchase will be required.
Note that the guarantee applies only to usage of the telephone in the manner in which it was intended. No liability is accepted for abnormal usage of the telephone or for any other damage that occurs as a consequence of such usage.

Service Enquiries

For any service or product information queries relating to this telephone, please call our ShareCall number 08602HELPU (0860243578) or visit our web site on **www.phones4telkom.co.za**.

User Manual
Data subject to change without notice

2532521 61A